## **The instructions of Moving Head**



**WKY-575A** 

WECAN	guarantee certificate
-------	-----------------------

Name	MovingHead		Packing	Poly foam Carton			
Model	WKY-575A		Size				
Relese			Attachment				
Date							
Importer's			Weight				
ADD							
Signature			Remarks	With Lamp			
of QC							
Email	wecanlight@126.com						
Breakdown	1						
explanation	2						
Remarks of	1						
Maintain	2						
	1	The dea	dline of free m	aintaince is within			
		1year si	nce the date of	shiping the goods.but			
		If damaged deliberately,crust be out of					
	shape breakage of lantern or light source						
guarantee		Is of our maintaince scope ,and the place of					
Instruction	<ul> <li>maintaince is limited in factory.</li> <li>The product maintenance depend on this</li> </ul>						
		Or we will charge your money. Please fill					
		In this table send to us with lighting					
		products when you need to maintain.					

CH1	大 光束变化 小									
光圈	0	0 127						255		
CH2	0~24	25~49	50~74	75~99	100~12	4	125~149	150~174	175~199	200~255
色盘1	白光	红色	黄色	蓝色	绿色		紫色	橙色	粉红	流水
СН3	0~34	35~69	90~104	105~139	140~	174	175~209	210~	255	
色盘 2	白光	红色	黄色	蓝色 绿色 紫色 颜色流水						
CH4		0~139		140~247				248~255		
频闪		暗亮 频闪,1~11 {			1~11 次	/秒 开光				
CH5	C	)度			220度		540度			
X轴	C	)			127				255	
СН6	0	度			140度				280度	
Y轴	0				127				255	
CH7	0	0.9 度 1.8 度								
X 微调	0	0 127 255								
CH8	0.9 度 1.8 度									
Y 微调	0	0 127 255								
СН9		0 255								
X/Y	水平和垂直旋转速度控制,由快到慢									
CH10		0~112 113~191 192~255					5			
图案 1	5 种图案依次出现 5 种单图案抖					斗动效果 图案盘流水运动				
CH11	0~199					200~255				
图案 2	5 种可旋转图案依次出现,					图案盘做流水运动				
CH12	0~128					129~255				
图转	图案顺时针旋转+速度控制 图案逆时针旋转+速度控制					įl				
CH13		清晰度调节								
调焦	0 255									
CH14	单图案					三棱镜				
棱镜	0 127				255					
CH15		0~127 129~255								
棱转		棱镜顺时	针旋转+速度	速度控制 棱镜逆时针旋转+速度控制						
CH16		0~22	9		230~240 241~255				5	
自检		空		持续3秒后灯具自检 空						

ONE: Voltage: 220V, 60HZ

Rated Power Consumption: 750W

Lamp: HMI575W

Control Signal: DMX512conntrol

Channels: 16CH

Color: Bi-color plate, with 14colors and white light

Gobos:, Bi-gobos plate, 8 gobos white light

Pan rotating: 540° Tilt rotating: 270°

Packing size: 528\*450\*805mm

Weight: 36kg

Safeguards: The heat radiate by 5 blower with 12v/12\*12.Cut the power if the temperature of switch is 175..the fuse breake if electric current reach To 10A.

## TWO: Channel Control

CH1. Iris

CH2. color

CH3. color

CH4. shutter

CH5.X axis:

CH6.Y axis:

CH7 X axis bit

CH8.Y axis bit:

CH9.X/Y axis micro step:

CH10.Repleceable gobos

CH11. Rotating gobos

CH12. Gobos rotation:

CH13. focus:

CH14. rotating prism:

CH15. prism rotating:

CH16. reset

## THREE: Instructions of liquid crystal screen

System reset Standard DMX 512 Address					
Standard DMX 512 Address					
Address choose condition .press "up" and "down" choose to					
Enter. Address 001-511					
Pan Inver					
.press "up" and "down" choose yes and no to Enter.No					
Tilt Inver					
.press "up" and "down" choose yes and no to Enter.No					
System Reset					
.press "up" and "down" choose yes and no to Enter.No					
Speed Adjust					
Press "up" and "down" choose Track 3 to Enter. X&Y Track 0					

FOUR: installation.


1, keep flat or Overhead hook.

2, power connect with the earth safely

3, address setting

4, signal line connection

FIVE : pattern paper

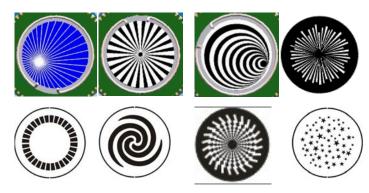


SIX: relevant address code setting of other stage lighting : the switch is set through 1-9.,

Code by binary system. number display board is decided by number., the confirmation of the start address code has changes according to the used controller's model. the following are a few usual coding ways of several models. In the table: N represent the most computer controlled by the controller. 16,20,60 represent that the channels number of the computer controlled by the controller. If the serial number of the computer light is 2, and the used controller modal is

DMX-192, according to the following table. the start code is 17, hence the position of

Computer	Start address code						
Light number	DMX 192controller	DMX 240controller	DMX 512controller				
1	1	1	1				
2	17 (1+16)	21 (1+20)	17 (1+16)				
3	33 (1+16+16)	41 (1+20+20)	33 (1+16+16)				
4	49 (1+16+16+16)	61 (1+20+20+20)	49 (1+16+16+16)				
5	65 (1+16+16+16+16)	81 (1+20+20+20+20)	65 (1+16+16+16+16)				
••••	•••••	••••	•••••				
N	N=192÷16=12	N=240 ÷ 20=12	$N=512 \div 16=32$				

the address is as follows.

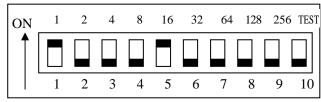

17=1+16, to use binary system express is 10001, comply with the front picture.

SEVEN: matters need attention

- a) a) there can not be inflammable substance and restricted freight b)it must has safe line to protect when hang the lamps downward.
- b) b) use steady 220V voltage and connect with protection power switch.
- c) when use the lamps for the second time, the using time can not less than 15 minutes. the lamps can become bright after temperature becoming down.
- d) d) Stop use that lamps ,when it does not work in the course of operation. avoid working for a long time in bad condition.
- e) e) Exam the radiating blower regularly.
- f) When change the lamps, your hand can not touch the glass part of the lamps. If touch it out of carelessness, please wash your hand with alcohol

EIGHT: protection

- a) a) exam the lamps and see if the screw is flexible regularly.
- b) b) Clear the dusty and garbage regularly.

Nine: trouble clearing

- a) our of control: 1)exam the signal and connection , short circuit 2)address code
- b) lamps off: 1)if power is connecting 2)if the fuse is bad. 3)if the lamps' lifespanIf the line become loose. 5) trigger is bad.

## Special advice:

Do not removal any part of the lamps in you are not a professional person, please contact the after sales service department of my company if you need to mend the light