


Display Control Instruction



LED MOVING HEAD

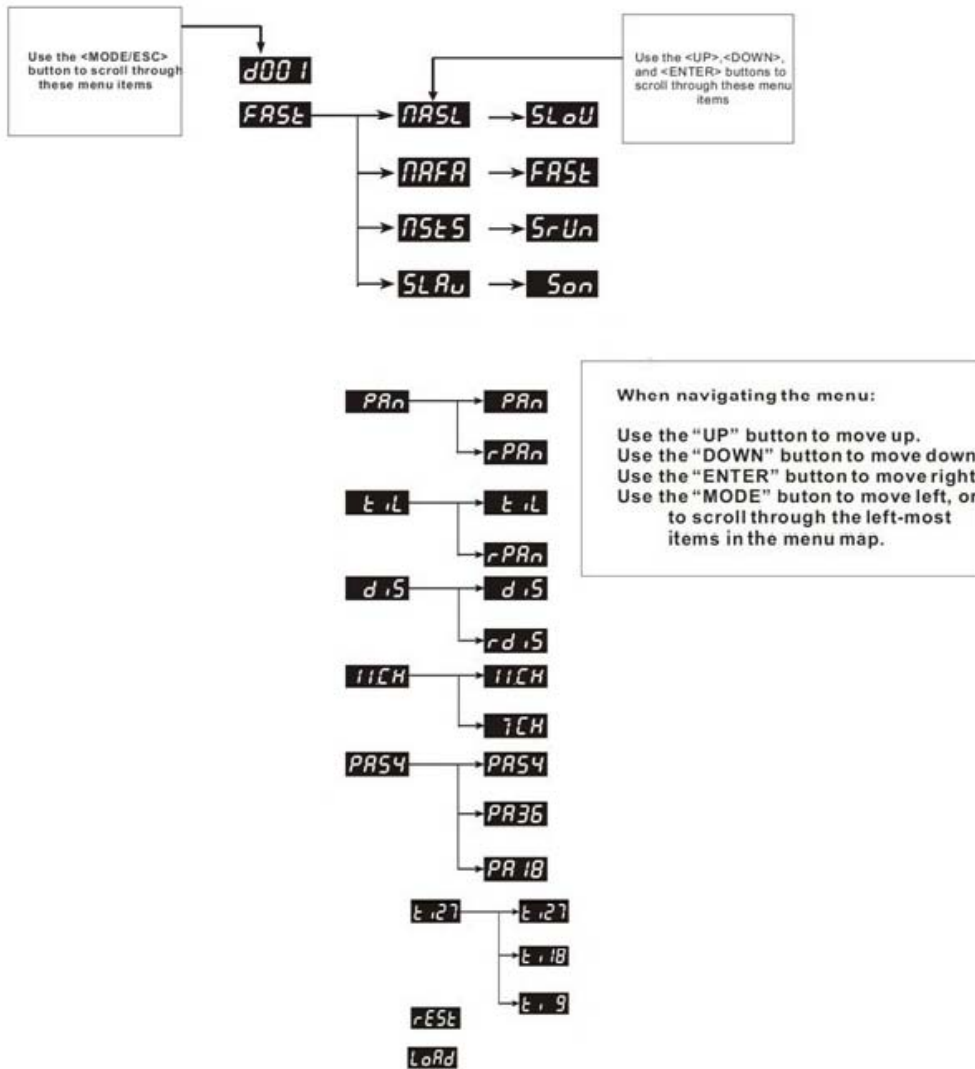

MODEL: WKY-L30



Wecan Technology and Lighting Co., Ltd

www.wecanlight.com

Model: WKY-L30

Channel: 7/11 DMX

Lamp: 1pc*30w LED White

Power: 100-220v,50-60hz, 80w

Color: 6+white+rainbow effect

Gobo: 6gobo+white+rainbow effect

Pan: 540°8bit/16bit adjustable, Electronic correction

Titl: 270°8bit/16bit adjustable, Electronic correction.

Size: 345*340*435mm

N.W: 3.2KG G.W: 4KG

DMX channell Values (11 channel)

Channel	DMX values	Functions
1 Pan	0-255	0-540°
2 Tilt	0-255	0-270°
3 Pan 16 Bit	0-255	16bit adjustable
4 Tilt 16 Bit	0-255	16bit adjustable
5 Pan/Tilt Speed	0-255	From fast to slow
6 Strobe	0-3	off
	4-7	open
	8-215	Strobe efect from fast to slow
	216-255	open
7 Dimming	0-255	From dark to light
8 Palette	0-7	White
	8-13	Rose
	14-19	Orange
	20-25	Green
	26-31	Pink
	32-37	cyanine
	38-43	Yellow
	44-54	White-Rose
	55-65	Rose-Orange
	66-76	Orange-green
	77-87	Green pink
	88-98	Pink-blue
	99-109	Blue-yellow
	110-120	Yellow-white
9 Gobo Wheel	121-191	Forwardrainbow From slow to fast
	192-255	Revise rainbow From slow to fast
	0-8	no
	8-13	Gobo 1
	14-29	Gobo 2
	20-25	Gobo 3
	26-31	Gobo 4
	32-37	Gobo 5
	38-43	Gobo 6
	44-55	Gobo 1 shake effect
56-67	Gobo 2 shake effect	
68-79	Gobo 3 shake effect	
80-91	Gobo 4 shake effect	
92-103	Gobo5 shake effect	
104-115	Gobo 6 shake effect	
10 Auto focs	116-193	Forward rainbow From slow to fast
	194-255	Revise rainbow From slow to fast
	0-255	Auto focs

11 BUILT-IN Channel	0-7	No function
	8-23	Built-in1
	24-39	Built-in 2
	40-55	Built-in 3
	56-71	Built-in 4
	72-87	Built-in 5
	88-103	Built-in 6
	104-119	Built-in 7
	120-135	Built-in 8
	136-151	Sound 1
	152-167	Sound 2
	168-183	Sound 3
	184-199	Sound 4
	200-215	Sound 5
	216-231	Sound 6
	232-247	Sound 7
248-255	Sound 8	

DMX channel Values(7 CH)

Channel	DMX values	Functions
1 Pan	0-255	0-540°
2 Tilt	0-255	0-270°
3 Dimming and Strobe	0-3	off
	4-7	open
	8-215	Strobe efect from fast to slow
4 Dimming	216-255	open
	0-255	From dark to light
5 Palette	0-7	White
	8-13	Rose
	14-19	Orange
	20-25	Green
	26-31	Pink
	32-37	cyanine
	38-43	Yellow
	44-54	White-Rose
	55-65	Rose-Orange
	66-76	Orange-green
	77-87	Green pink
	88-98	Pink-blue
	99-109	Blue-yellow
	110-120	Yellow-white
	121-191	Forwardrainbow From slow to fast
	192-255	Revise rainbow From slow to fast
6 Gobo Wheel	0-8	no
	8-13	Gobo 1
	14-29	Gobo 2
	20-25	Gobo 3
	26-31	Gobo 4
	32-37	Gobo 5
	38-43	Gobo 6
	44-55	Gobo 1 shake effect
	56-67	Gobo 2 shake effect
	68-79	Gobo 3 shake effect
	80-91	Gobo 4 shake effect
	92-103	Gobo5 shake effect
	104-115	Gobo 6 shake effect
	116-193	Forward rainbow From slow to fast
194-255	Revise rainbow From slow to fast	
7 Auto focs	0-255	Auto focs

